

TRUXEDO® LO PRO QT REPLACEMENT PARTS						
1 ** 2 ** 3 ** 4 111754 5 170466 6 ** 7 ** 8 170042 9 170466 10 111759	TruXedo® Lo Pro QT Replacement Cover Black Front Header Header Seal, Notched Front Header 08 End Plugs (Set of Two) Header Guide_QT * Safety Strap Washer Flat 5/16" Cap Screw, 5/16-18 x 5/8"	11 1704715 12 *	Extruded Retainer Loop ** End Plug, 1" OD Black Bow Spring Plunger, 5/8" x 2.15" Tension Control Bracket Header Insert Safety Clip Hook and Loop Fasteners	21* 22 _* 23 1114773 24 1704213 25 1702926 26 1704187	Side Rail, Passenger's Side Side Rail, Driver's Side Flat Spring, 5/8" x 3 7/8" Latch Assembled Cap Screw, 5/16" x 7/8" Header Stop Side Rail End Plugs w/Seal (Set of Two) Filister Head Screw Rear Header 08 End Plugs (Set of Two) Black Rear Header Weld Nut 5/16-18 ZP	

^{*} Please specify length or make and model of vehicle.



2209 Kellen Gross Dr., Yankton SD 57078
Phone: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304

Web Site: http://www.truxedo.com

P/N 1116967 Rev. R

LIFETIME WARRANTY

TruXedo warrants that all new, unused products are free from defects in material and workmanship. This Warranty is effective if the product is properly installed and used for the purpose intended for the life of the product. It applies to the original buyer only. TruXedo's obligation under this Warranty is limited to repairing, or at its option, replacing any part that is returned, transportation prepaid, to TruXedo, Yankton, South Dakota, if the product is, in our judgment, defective. All materials must be accompanied by an RMA (Returned Material Authorization) number requested by and authorized in advance of returning the materials. TruXedo shall not be liable or responsible to supply or pay labor to replace any part found defective, nor shall it be liable for any damages of any kind or nature to person, product, or property.

There are no Warranties for used products or products that have been repaired, altered, modified, subjected to misuse, negligence, accident or ordinary wear and tear. Limitations may apply to logo screen printing. Call 1-877-878-9336 for complete details.

TruXedo products are sold without any express warranty except as set forth above. TruXedo is not obligated to honor warranty claims if Genuine TruXedo parts are not utilized.

DIRECT ALL WARRANTY CLAIMS TO TRUXEDO AT 1-877-878-9336

Register online at www.truxedo.com or mail this form to: TruXedo, P.O. Box 1078, Yankton, SD 57078-1078							
Name:Address:		Product Purchased: □ Original TruXedo					
City: Phone Number: Email Address:	State:Zip:	□ TruXedoPlus □ TruXport □ TruXedo Deuce □ TonneauTraX					
	Price Paid:						
Pickup Make: Model:	Year:	□ TonneauMate □ Edge					

OWNER/USER RESPONSIBILITIES

It is the responsibility of the owner/user to read this manual and comply with the operating procedures. The owner/user is also responsible for inspecting the TruXedo® cover, and for having parts repaired or replaced when worn or damaged.

Failure to follow safety instructions and warning labels could result in failure of your cover system and/or personal injury.

MESSAGES TO INSTALLER


- Always wear safety glasses and/or other necessary protective equipment when installing your TruXedo[®].
- These instructions are complete for most pickup models. Additional instructions are included, if required for your truck. Please read entire manual before installing your TruXedo[®].

COVER MAINTENANCE


Vinyl cover can be hand washed with mild soap and water or cleaned in a car wash. Thoroughly rinse cover to remove any soap residue. Cover can be treated with any vinyl protectant made for tonneau covers. **Never use silicon, petroleum, or citrus based products on your tonneau cover.**

SAFETY INSTRUCTIONS

- 1. Do not place objects on or against cover or framework.
- 2. Do not tie cargo to TruXedo® framework.
- 3. Never allow children or pets to occupy pickup box while cover is closed.
- 4. Cover is not airtight. Special care is required to keep cargo clean and dry.
- Fabric cover won't prevent theft of contents inside truck box.
- Cover must be rolled fully open and secured with safety straps when towing vehicle backwards.

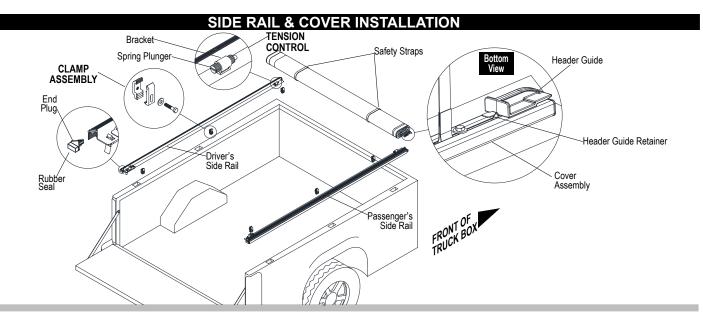


STEP 1: Attach the TruXedo rails to the truck's vertical inside flange as ISTEP 2: For optimum latching performance and cover fit, side rails shown in Detail A. To get the correct TruXedo rail alignment from front to back, See Detail-B. Compress the rear D-seal against the closed tailgate and hold. Attach clamps starting at the tailgate. Evenly space 3 clamps along each TruXedo rail, leaving approximately 8" on each end.

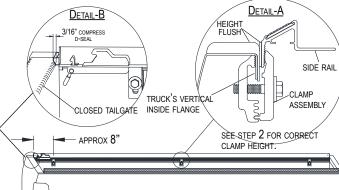


must be level. To adjust rails, loosen screws and reposition male clamps higher or lower. Tighten all clamps.

Tighten clamps securely on side rails before driving vehicle.

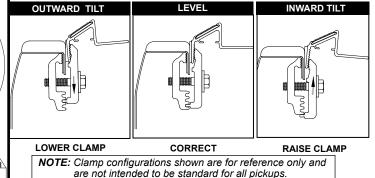


STEP 3: Set cover assembly behind cab with header seal on top of of bulkhead. See detail C.

STEP 4: Push header guides into place under side rail. A click sound will indicate a secure attachment. See detail D & E below.

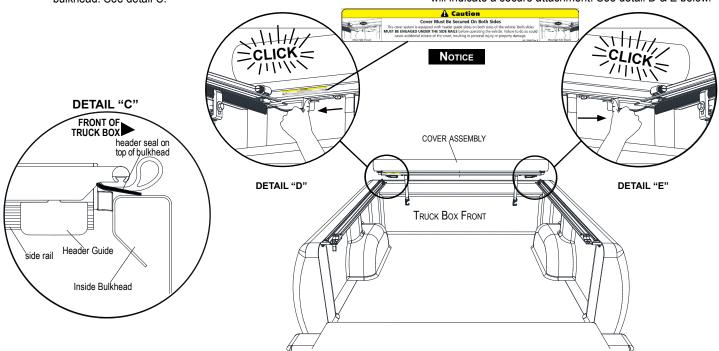


HOW TO REMOVE COVER ASSEMBLY

STEP 5: If you want to remove cover assembly push up on .STEP 6: Always close cover before closing tailgate. retainer tab with thumb and pull header quide over retainer until it stops. Do this for both passenger and driver side. Then

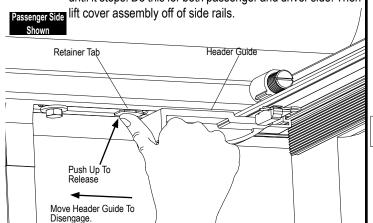


LATCHING & UNLATCHING COVER

 
Unroll cover toward tailgate and rest bows on side rails. Rotate header into header stops and press down to lock



 
NOTE: If tailgate has a key lock, TruXedo® is secured until tailgate is unlocked and opened.




STEP 7: Secure hook fastener and Velcro® loop fastener strips on one side of rail, by pressing along full length of rail. Pull cover tight across pickup bed, and secure fasteners on opposite side rail.

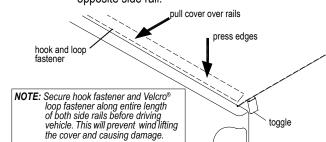

STEP 8: To release cover, Trigger pull rear release toggle. Start rolling cover toward cab making sure both sides of cover roll evenly. For best results leave unrolled portion of cover attached to the hook fastener and Velcro® loop fasteners while opening.

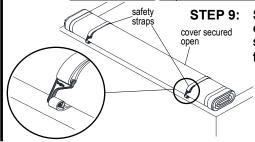


Secure cover open by hooking safety straps to front loops.

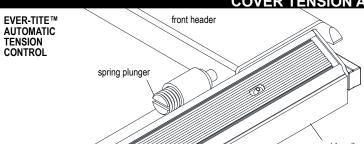

- **COVER TENSION ADJUSTMENT**
 - Spring plunger compensates for material expansion & contraction caused by temperature changes.
 - · Check cover tension after installation, seasonally, and after extreme temperature changes.
 - For best performance, adjust tension regularly to protect your cover against wind wear.

STEP 10: Set tension during warmest part of day. With cover closed, release hook and loop fastener from both side rails near cab. Check compression of both spring plungers against the front header per diagram. Roll cover open and make adjustments. Close cover and re-check adjustment. Repeat until satisfactory tension has been achieved

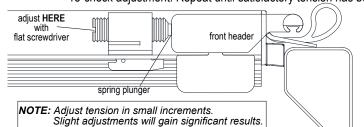


Questions?

Call our friendly customer service staff

at TruXedo Toll Free:

1-877-878-9336 Mon - Fri 8 am - 5 pm CST

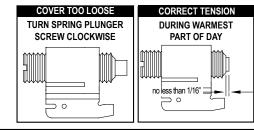

TROUBLE SHOOTING

HEADER WILL NOT LATCH:

Check side rails to make sure they are level. See Step 2.

Make sure the header seal is not caught between side rail & header.

Check position of side rails on pickup box, they may be positioned too low. See Step 1.

Make sure cover has proper tension. See Step 9.

FABRIC COVER IS TOO TIGHT OR TOO LOOSE: See Step 9 to adjust tension.

* VELCRO® is a registered trademark of the Velcro companies.