

TONNEAU COVER SPECIAL INSTRUCTIONS

For: Front Element Seal Kit #30890 Installation


Tools:

- 1) Scissor
- 2) Cleaning supplies


NOTE: Install this seal kit after installing side rails and before mounting cover. If cover was installed previously, roll it open and remove it from rails.

A. At front of box header, clean top of surface with enclosed alcohol pad (if needed wash and dry surface first).

NOTE: If applying over a spray-in bed liner, some sanding may be required for best adhesion.

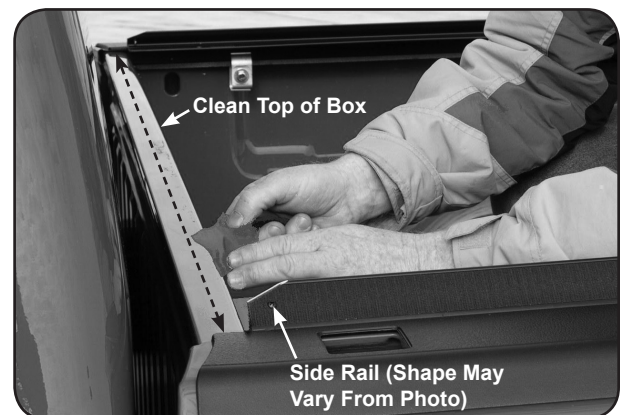

B. Apply seal to top of box header with tall leg aligned against front of side rail. Start at one corner and continue across box to opposite side using care to align tall leg with inside edge of box. Cut excess seal off. Firmly press on adhesive all along seal.

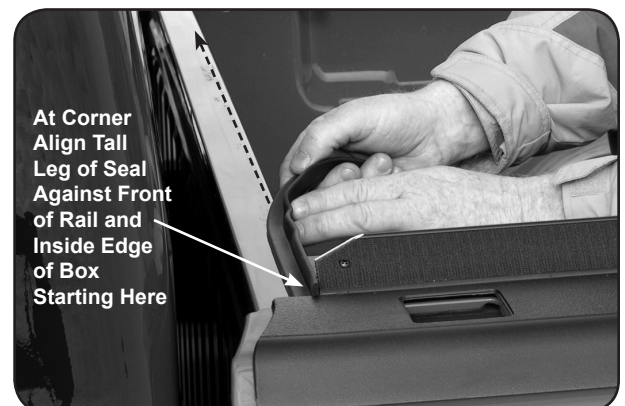

TIP: For a nicer fit, trim cut vertical leg of seal to match slanted angle of rails.

NOTE: For additional protection, inspect box for any miscellaneous factory holes, crevices, stake pockets etc. and seal them as needed. (Sealants not included.)