




# HOW TO: Battle Mat INSTALLATION

- TOOLS NEEDED:**
- UTILITY KNIFE
  - STRAIGHT EDGE

**NOTE: NO FASTENERS NEEDED. THE 1.25" SCREWS INCLUDED ARE TO BE USED FOR INSTALLING CORE TRAX ON TOP OF THE BED MAT. SAVE THESE FOR FUTURE USE.**


## STEP 1: CONFIRM BED LENGTH

- If you have a 6'4" - 6'9" bed, there is no need to trim the Battle Mat.
- Simply place the mat on top of your DECKED drawer system, center it, and keep on truckin'.

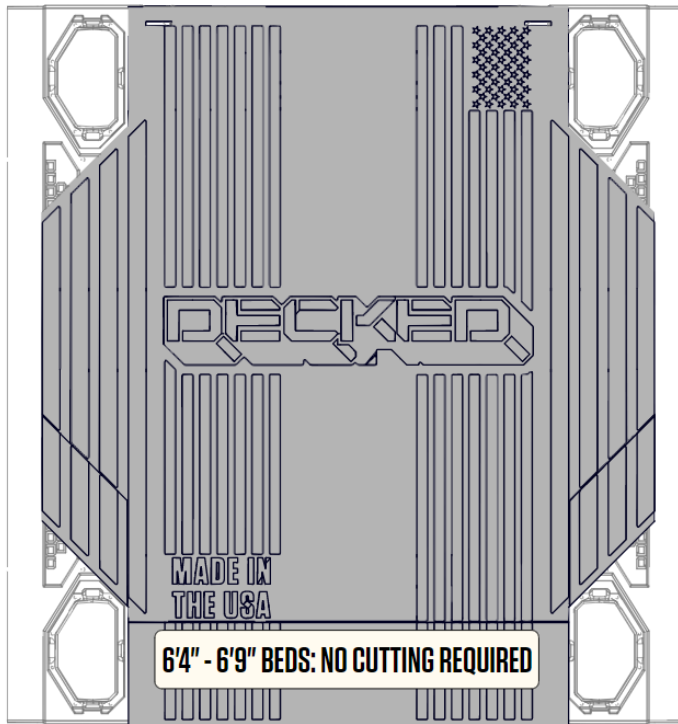

## STEP 2: TRIM BED MAT FOR SHORT BEDS

- The Bed Mat will need to be trimmed for 5'5" - 5'9" beds.
- Locate the recessed cutting lines marked on the tailgate end of the Battle Mat.
- Use a SHARP utility knife.
- Don't be a hero - use at least three gentle but firm passes to cut through the Battle Mat - see detail in red below.
- No waste! You can use the trimmed off piece as a drawer liner.

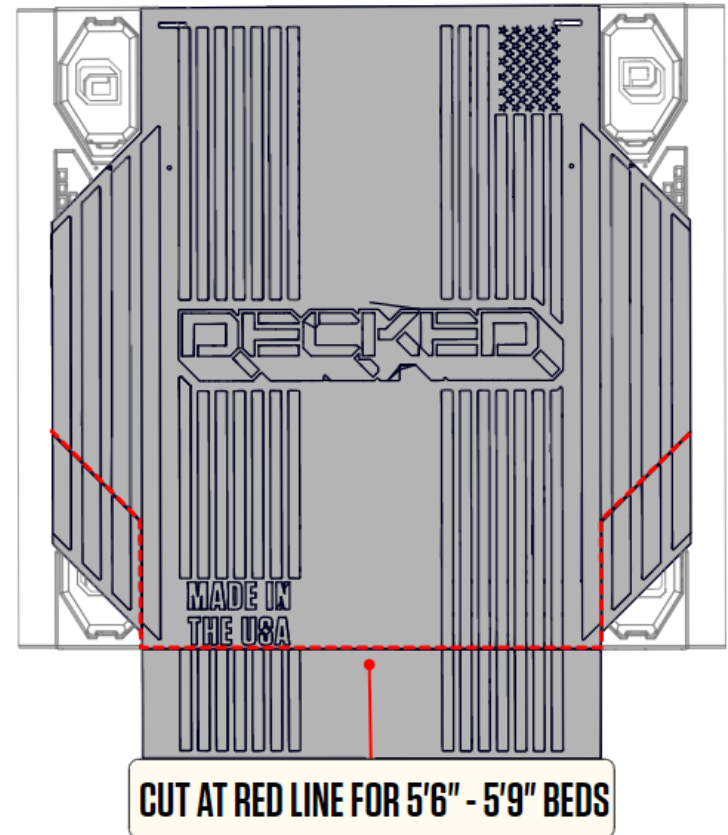

THESE MIGHT BE USEFUL: Watch installation videos at [www.DECKED.com/video](http://www.DECKED.com/video) or scan here: